

ABSTRACT

All HOMA single phase TP, A and GRP Series pumps utilize externally wired capacitors. Your pump may be provided with a single run capacitor, and no start capacitor or potential relay. This document will help you to wire the external capacitor to the pump.

PROCEDURE

Wire **Z2** is the connection to the start winding.
Wire **U2** is the connection to the run winding.
Wire **U1** is the common connection for both windings.

If your pump was provided with one capacitor, use this diagram together with the attached pump wiring diagram to complete the installation.

