

Technical Pages

ABSTRACT

All HOMA single phase TP, A and GRP Series pumps utilize externally wired capacitors. Your pump may be provided with a start capacitor and one or two run capacitors along with a potential relay. This document will help you wire the external capacitors to the pump.

PROCEDURE

- Wire **Z2** is the connection to the start winding.
- Wire **U2** is the connection to the run winding.
- Wire **U1** is the common connection for both windings.

If your pump was provided with 2 or more capacitors and a relay, use this diagram together with the attached pump wiring diagram to complete the installation.

